


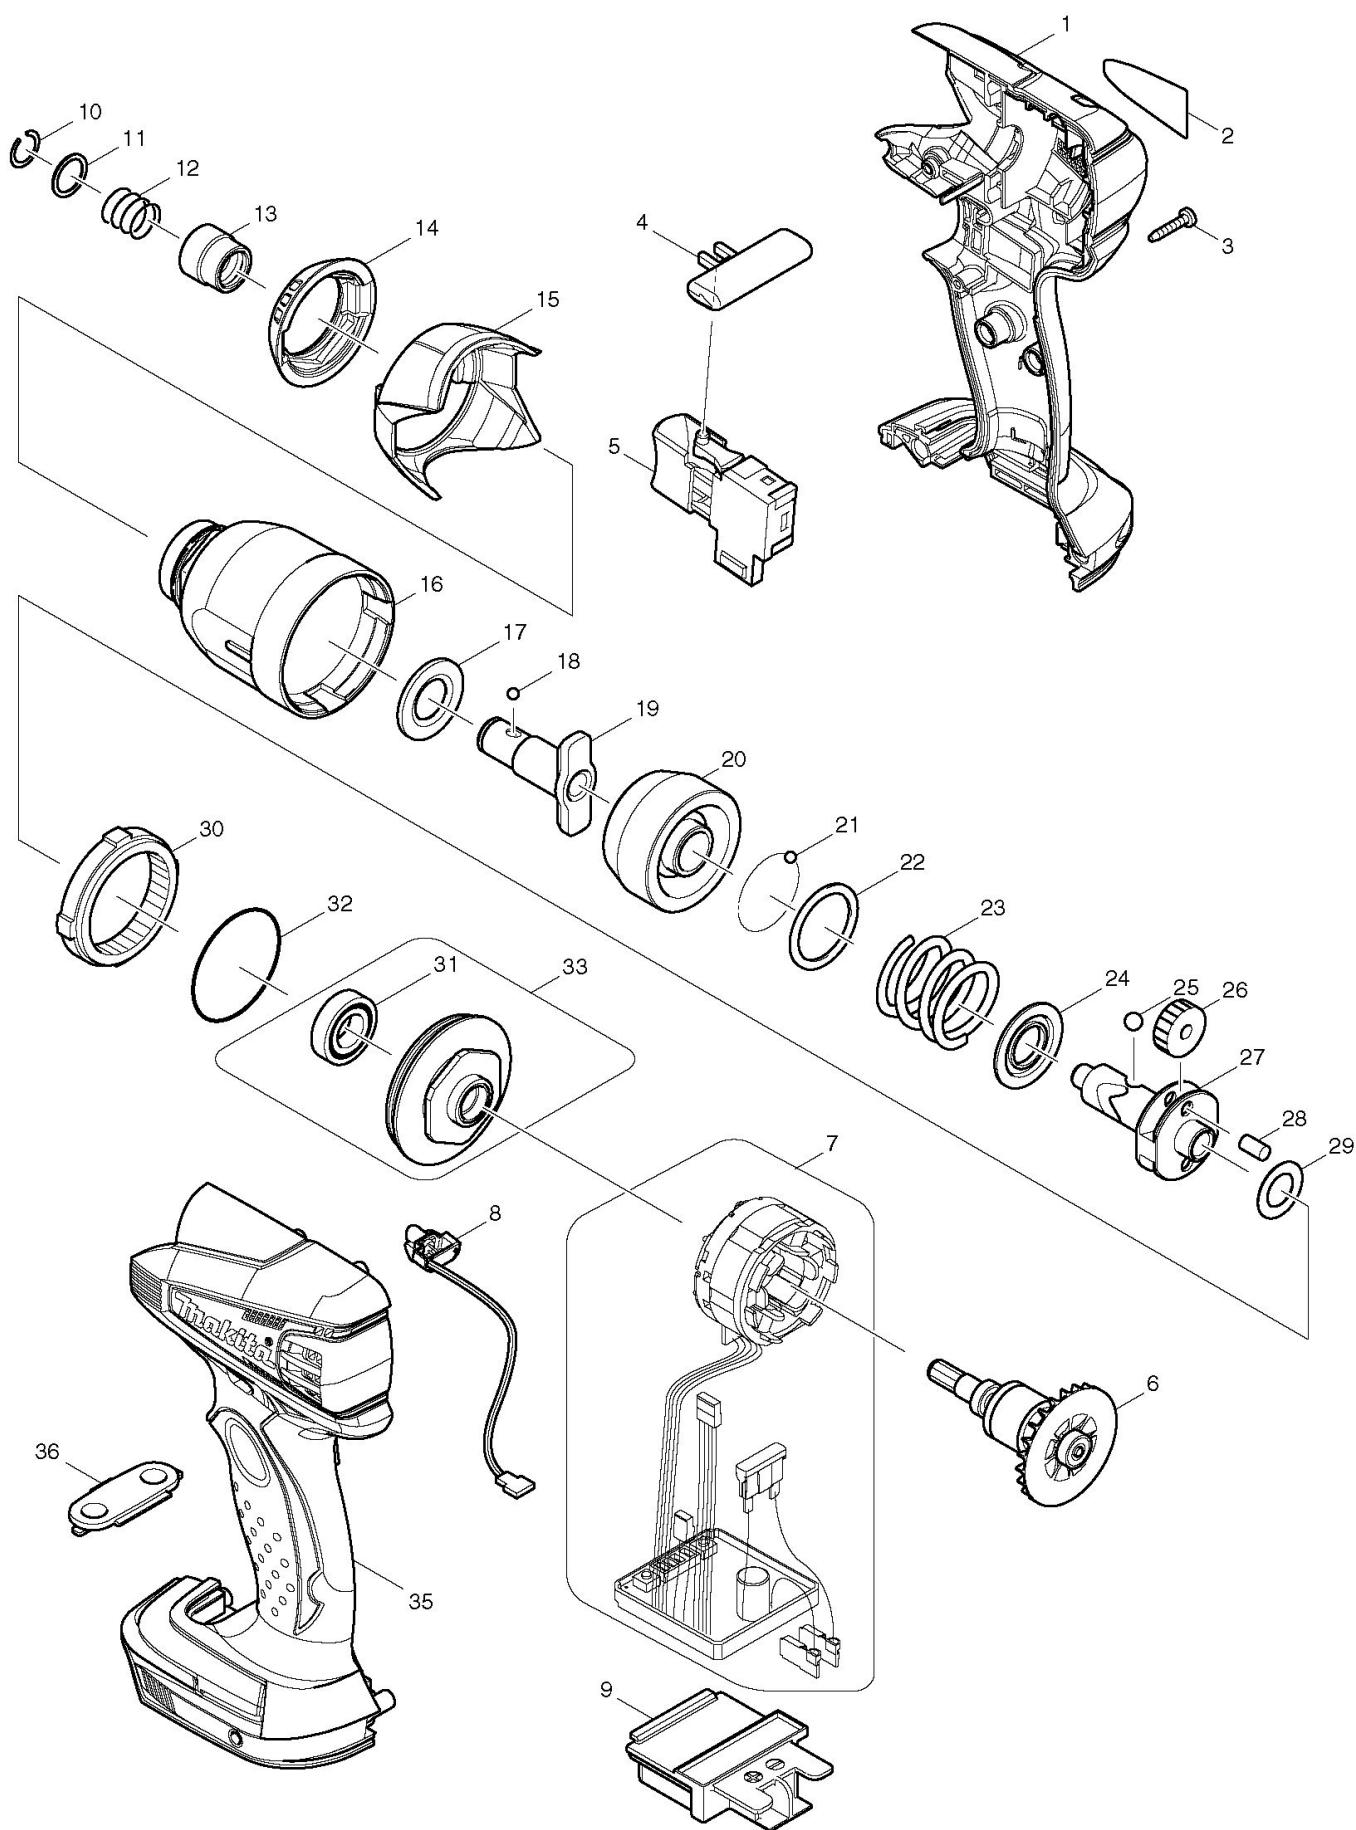

POSIÇÃO	Código da peça	Name
1	188599-6	CONJUNTO CARCASA BTD132D
2	865955-4	BTD132 NAME PLATE
3	266130-9	
4	419041-9	PALANCA CAMBIO REVER.BTD130F
5	650607-8	INTERRUPTOR 1 BTD130D
6	619239-0	INDUCIDO BTD132D
7	638666-2	ESTATOR CON CONTROLADOR BTD132
8	631829-9	CIRCUITO DE LUZ BTD130D
9	643832-8	TERMINAL BTD130D
10	231951-8	ANILLO CIERRE 11 PARA 6903DW
11	267085-1	ARANDELA PLANA 12 -6903VDW*
12	233005-7	MUELLE COMPRESION 13 6903VDW
13	324420-7	CASQUILLO DE CIERRE 6916FD
14	424362-6	PROTECTOR BTD132D
15	452293-9	CARCASA DEL MARTILLO BTD132
16	154590-6	CARCASA DEL MARTILLO BTD130F
17	261108-7	ARANDELA DE NYLON 14 P/6908DW
18	216001-0	BOLA DE ACERO 3.5*
19	324432-0	YUNQUE PARA 6980FD
20	324583-9	MARTILLO BTD130F
21	216001-0	BOLA DE ACERO 3.5*
22	267175-0	ARANDELA PLANA 24 PARA 6914DW
23	233430-2	MUELLE COMPRESION 24 BTD130F
24	267766-7	ARANDELA TAPA 14 6918FZ
25	216011-7	BOLA DE ACERO 5.6*
26	227233-4	ENGRANAJE 22 BTW250
27	324552-0	EJE PARA BTD130F
28	256253-1	BULON 5
29	267212-0	ARANDELA PLANA 12 PARA 6918DW
30	227150-8	CORONA INTERNA 51 BTD130F
31	211140-1	RODAMIENTO 6901LLBPARA 6918DW
32	213507-9	JUNTA TORICA 40
35	188599-6	CONJUNTO CARCASA BTD132D
36	158856-6	PLACA INTERRR CPL BTD132D